

Instructions for Using the TV's

Click <[here](#)> to see instructions for the New Apple TV.



Credit: Apple

Living Room

To turn on and view the TV:

- Press the POWER button on the cable box controller. This should turn on the cable box and the television.
- If the TV did not turn on, press the POWER button on the TV controller.
- Set the input to the correct source: Press <TV/VIDEO> using the TV remote to view cablevision (TV), the DVD Player (Video2), or the PlayStation (Video1).
- To watch TV from the cable box, the TV must be set to Channel 3.
- Use the cable box controller to adjust the volume and to set the cablevision channel.

To play video games, DVD movies, or music CD's, turn on the PlayStation and set the source on the TV controller to <Video2>. Insert the DVD, CD or game into the PlayStation tray.

- Use the Sony games console remote (gamepad) to control games, DVD movies and CD's when using the games console.
- Press X on the gamepad to start. To pause, press the square button; to stop, press the circle button.

To play DVD movies using the DVD Player, turn on the DVD Player and set the source on the TV controller to <Video1>. Insert the DVD into the player tray.

You may also use the stereo system to play music CD's or to listen to the radio.

Master Bedroom

To turn on and view the TV:

- Press the POWER button on the cable box controller. This should turn on the cable box and the television.
- If the TV did not turn on, press the POWER button on the TV controller.
- Set the input to the correct source: Press <TV/VIDEO> using the TV remote to select <TV> to watch cablevision.
- Ensure that the TV is set to Channel 3.
- Use the cable box controller to adjust the volume and to set the cablevision channel.

Bedrooms 2 & 3

To turn on and view the TV:

- Press the POWER button on the TV remote.
- Press the POWER button on the cable box remote.
- Ensure that the <INPUT> is set to <TV>.
- Ensure that the TV is set to Channel 3.
- Change channels or adjust the volume using the cable box remote.

To Play a Movie DVD or Play a Game

Change the input <TV/VIDEO> using the TV remote to view cablevision <TV>, to view movies on the DVD player <Video2>, or to play video games on the Games Console <Video1>.

To return to TV mode, press the input <TV/VIDEO> on the TV remote and select <TV>.

To Play a Music CD

You have the choice of playing music on the CD player or the Games Console. The Games Console can play music CD's, DVD movies, and video games.

To play the radio on the CD player, use the receiver on the TV stand in the Living Room. A remote control is provided for the CD player. You can also use the CD Player to play your music on your iPod (or similar portable music player).

Remote Controls



Daytek TV Controller: Use this controller to control Daytek 19" flat screen televisions. Note that some of our properties do NOT have a controller for the Daytek televisions in every room. You can operate these televisions manually.

To operate the TV manually:

1. Press <POWER> on the right side of the TV to power the television on or off.
2. Press <INPUT> on the right side of the TV to set the correct video mode (input source).

To operate the TV by remote control:

1. Press <POWER> on the TV Controller to turn on the television.
2. To watch cablevision channels, ensure that the <INPUT> button is set to <AV>.
3. To watch the games console: N/A.
4. To watch the DVD Player, ensure that the < INPUT > button is set to <AV2>. Not all bedrooms have DVD Players.



Toshiba TV Controller: Use this controller to control the Toshiba television.

To operate the TV:

1. Normally, you should only need to follow the instructions in this document to turn on the cable box. The remote control for the cable box is set up to control the power of the box and the TV at the same time.
2. If the cable box is on, but the television is not powered on, then press <TV>, then press <POWER> on the TV Controller to turn on the television.
3. To watch TV, ensure that the <TV/VIDEO> button is set to <TV>.
4. To watch the games console, ensure that the <TV/VIDEO> button is set to <Video1>.
5. To watch the DVD Player, ensure that the <TV/VIDEO> button is set to <Video2>.



remote control button functions

POWER	Power On and OFF to TELUS TV signal box Power On and OFF to other devices
TV	Selects the television mode
TELUS TV	Selects the TELUS TV mode
AUX	Selects the auxiliary mode, to operate auxiliary device, such as VCR or DVD
INPUT	Selects video input
VOD	Displays the TELUS Video On Demand (VOD) menu
GUIDE/PAV	Displays the TELUS TV GUIDE and switches between above to display all channels, subscribed channels and favourite lists
CHANNEL +	Selects the next higher channel
CHANNEL -	Selects the next lower channel
VOLUME +	Increases volume
VOLUME -	Decreases volume
MUTE	Turns ON or OFF all sound
LAST	Tunes to the previously selected channel
PAGE UP	Displays previous set of list items
PAGE DOWN	Displays next set of list items
INFO	Displays text information about the selected program
EXIT	Closes all menu systems and return to broadcast TV
MENU	Displays the main MENU for the Interactive Program Guide (IPG)
SEARCH	Displays the SEARCH menu
MOVE SELECTION	Moves selection up, down, left or right
OK	Selects highlighted item
REVERSE	Reverses a VCR or VCR/DVD program For VOD, you can choose from 3 speeds
PLAY	Plays a VCR or VCR/DVD program
FORWARD	Fast forwards a VCR or VCR/DVD program For VOD, you can choose from 3 speeds
RECORD	Records on selected device
STOP	Stops VOD or VCR/DVD program
PAUSE	Pauses VOD or VCR/DVD program
my TELUS	Displays my TELUS channel with local news, weather and sports

TELUS Cable Box Universal Controller: Use this controller to control the television and cablevision cable box.

To turn ON or OFF the cable box and television: Press <TELUS TV>, then press <POWER>.

Note: If the television did not turn on with the cable box, press <TV>, then press <POWER>.

To adjust the TV volume: Press <VOL> + or -

To adjust the channel: Press <CH> + or -

To view the TV guide: Press <GUIDE>

Please do not change the TV and cable box settings. If these are inadvertently changed, please inform the Owner so that we can reset the controller before the arrival of the next guest.

Equipment Locations

Unit 444 (Playa del Sol)	Living Room	Sony 36" WEGA Xbox Games Console CD Stereo System
	Bedrooms	Daytek 19" Flat Screen Toshiba DVD SD-4000
Unit 472 (Playa del Sol)	Living Room & MBR	Toshiba 27" 27AF46Ca Telus PVR PS2 Games Console Toshiba DVD SD-4000 CD Stereo System
	Bedrooms 2 & 3	Daytek 19" Flat Screen Telus Cable Box
Unit 473 (Playa del Sol)	Living Room	LG 42" Plasma 42PQ20 SHAW PVR Toshiba DVD SD-4000
	Bedroom	Daytek 19" Flat Screen
	Loft	Toshiba 27" 27AF46Ca Toshiba DVD SD-4000
Unit 1405 (Sunset Waterfront Resort)	Living Room	LG 53" Flat Screen LCD 3D Smart TV SHAW PVR DVD Player PS3 Games Console Receiver Boombox
	Bedroom	Sony Flat Screen Apple TV
	Den	Daytek 19" Flat Screen LG Smart Box