




## Games Controller & Remote Controls

This document describes the various functions and remote control units for the games console(s) supplied in our property.

 <p>Credit: Apple</p>	<p><u>New Apple TV:</u> Use this controller to control the Apple TV games console and smart box. The controller can also be used to control the operation of music, videos, movies and games.</p> <p>The controller is wireless, but must be occasionally charged using the supplied USB-to-Lightning cabled.</p> <p>Click <a href="#">&lt;here&gt;</a> to see instructions for using the voice feature of the New Apple TV.</p>
 <p>Left Shoulder Buttons (L1 &amp; L2)    Right Shoulder Buttons (R1 &amp; R2)          Select Button    Directional Pad (D-Pad)          Square, Triangle, X and O Buttons    Start Button          Left Thumbstick (Left Analog)    Right Thumbstick (Right Analog)</p>	<p><u>PS3 Controller (Gamepad):</u> Use this controller to control the PlayStation games console. The controller can also be used to control the operation of music CD's and DVD movies.</p> <p>At least one controller must be attached to the games console.</p>
	<p><u>PlayStation 3:</u>          We have provided a PS3 games console for you to enjoy. It has two controllers (see above), and several games.</p> <p>The console can also be used to play music CD's and DVD movies.</p> <p>To turn on or off the console, press the POWER button for a moment. The EJECT button opens and closes the disc tray. Ensure that the INPUT on the TV is correctly set. Volume can be set using the TV controller.</p>

	<p>For more information, you can view the manual here: <a href="http://www.playstation.com/manual/pdf/PS3-01-1.9_2.pdf">http://www.playstation.com/manual/pdf/PS3-01-1.9_2.pdf</a></p>
--	--