


## Stereo, DVD Player & Remote Controls

This document describes the various remote control units for the stereo, DVD player, and some other audio-visual equipment provided in our properties. Please refer to the respective controller for directions. Some controllers may not be applicable to this property.

	<p><u>Receiver Controller</u>: Use the controller to control the Receiver. Only local over-the-air radio channels are available.</p> <p>The stereo system does not require the television to be on. It has its own speaker system.</p>
	<p><u>DVD Player Controller</u>: Use this controller to control the DVD Player. The DVD Players can play both music CD's and movie DVD's. Note that most units also have game consoles that can play music CD's and movie DVD's.</p> <p>To operate the DVD Player:</p> <ol style="list-style-type: none"> <li>1. Press &lt;POWER&gt; on the <u>DVD Player Controller</u> to turn on the DVD player.</li> <li>2. Use the <u>Cable Box Universal Controller</u> to turn on the TV (see instructions in this document).</li> <li>3. Use the <u>TV Controller</u> to set the video input mode on the television (see instructions in this document).</li> </ol>
	<p><u>BoomBox Controller</u>: The Boombox has its own remote control that is stored in a special slot at the top of the device. Only local over-the-air radio channels are available.</p> <p>The BoomBox will charge and play any <b>iPhone 4</b> or similar <b>Apple iPod</b>. Other portable music devices may be attached using the supplied patch cable.</p>